 


# COVE INSTALLATION

## Components & Hardware



(A) Cove, Qty. 1



(B) 1.25" Bracket, Qty. 2



(C) Thumbnut, Qty. 2



(D) P-Clamp, Qty. 2



(E) #8 x .75", Qty. 2

## Tools Needed





\*Surface thickness: Fits surface .25" to 1.25" with provided clamp. For surfaces up to 1.50" an alternate clamp is required (sold separately)

**Note:** A licensed electrician should make the hardwire connections. For use on dry work surfaces or furniture only. No serviceable parts, do not disassemble.


Model	COV-1U	COV-2	COV-2L	COV-2U	COV-2U-D	COV-RJ-2U	COV-RJ2-2U	COV-22U	COV-3	COV-3U	COV-3U	COV-3-D	COV-3U-D	COV-4	COV-4U	COV-4-D	COV-4U-D	COV-6	COV-6U	COV-6U-D
"X" Dim.	4.50"	4.50"	5.25"	5.25"	9.00"	6.75"	6.75"	7.25"	5.75"	7.25"	7.25"	9.50"	11.00"	7.25"	8.25"	11.00"	12.00"	10.25"	12.75"	16.50"

## Installation Instructions:

- 1- Determine the surface cutout for the Cove (A) model being installed and prepare the surface. Note: refer to chart to determine X dimension.
- 2- Insert the Cove through the cutout.
- 3- For clamping Cove\* - Place brackets (B) and thumbnuts (C) on stud. Tighten nuts until secure, do not over tighten. For screw face Cove (not shown) – Using countersunk holes install screws (not provided) into work surface as desired. Tighten screws until secure, do not over tighten.
- 4- Connect power and data as needed.
- 5- Connections for hardwire units:  
 Black wire – circuit hot  
 White wire – circuit neutral  
 Green wire – circuit ground

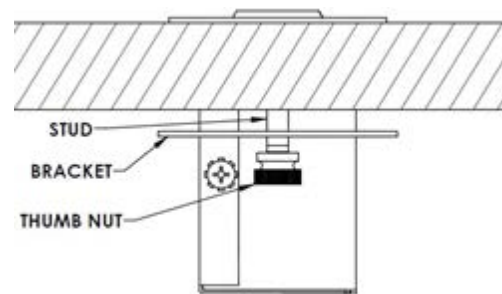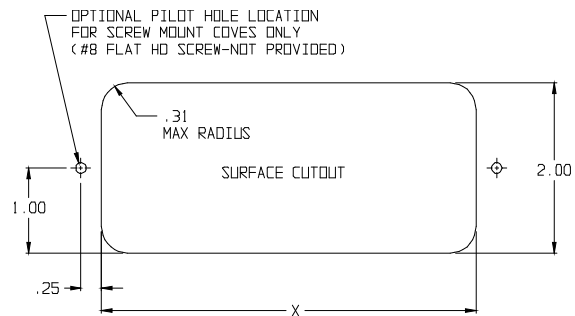

Standard Clamp

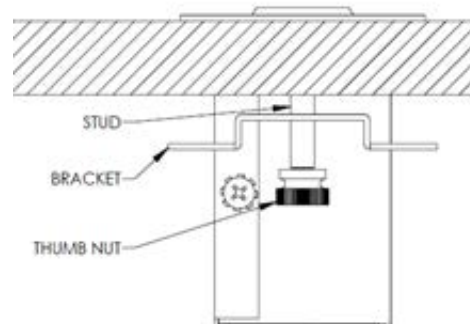

1.5" Clamp (sold separately)