

COVE WITH DAISYLINK INSTALLATION

Components & Hardware



(A) Cove, Qty. 1



(B) 1.25" Bracket, Qty. 2



(C) Thumbnut, Qty. 2



(D) P-Clamp, Qty. 2



(E) #8 x .75", Qty. 2

Tools Needed



* Surface thickness: Fits surface .25" to 1.25" with provided clamp. For surfaces up to 1.50" an alternate clamp is required (sold separately)

Note: Use only Electri-Cable Assemblies System 42 Cables. ECA System 42 connectors have been evaluated to prevent inadvertent contact with live parts. Unused connector openings are not required to be capped; however a cap is available from the factory if desired.

Model	COV-1	COV-1U	COV-2	COV-2U	COV-2UD	COV-R1-2U	COV-R12-2U	COV-3	COV-3U	COV-3U-D	COV-4	COV-4U	COV-4UD
"X" Dim.	3.25"	4.50"	4.50"	5.25"	9.00"	6.75"	6.75"	5.75"	7.25"	11.00"	7.25"	8.25"	12.00"

Installation Instructions:

1- Determine the surface cutout for the Cove (A) model being installed and prepare the surface.
Note: refer to chart to determine X dimension.

 
 
2- Insert the Cove through the cutout.

3- For clamping Cove* - Place the brackets (B) and thumbnut (C) on stud. Tighten nuts until secure, do not over tighten.


For screw face Cove (not shown) – Using countersunk holes install screws (not provided) into work surface as desired. Tighten screws until secure, do not over tighten.

4- Connect System 42 power cables to connectors of Cove; ensure latches are secure and fully seated.
Mount data cables as required.

5- Use P-Clamps (D) and remaining screws (E) to route cable and attach to underside of work surface as needed.

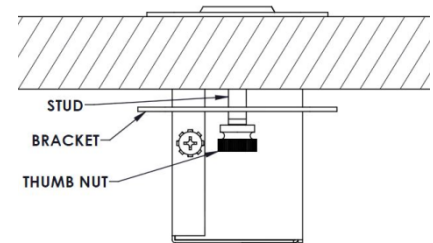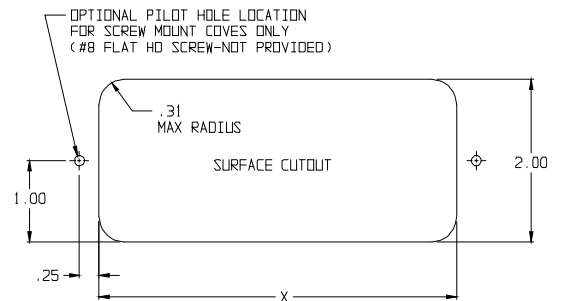

Standard Clamp

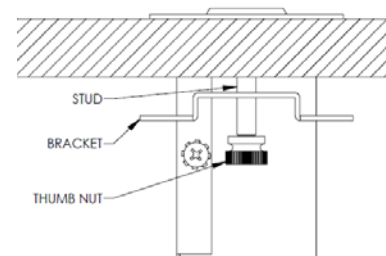 

1.50" Clamp (sold separately)