
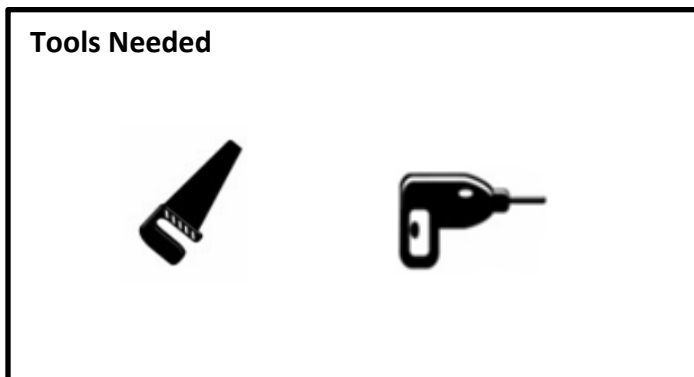


COVE SERIES INSTALLATION

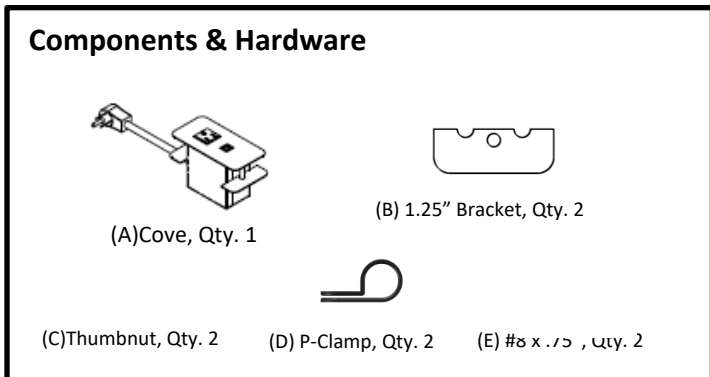



*Surface thickness: Fits surface .25" to 1.25" with provided clamp. For surfaces up to 1.50" an alternate clamp is required (sold separately)

Note: A licensed electrician should make the hardwire connections. For use on dry work surfaces or furniture only. No serviceable parts, do not disassemble.


MODEL	COV-1U	COV-1UC60	COV-1UC60-D	COV-2	COV-2I	COV-2U	COV-2UD	COV-2UC60	COV-2UC60-D	COV-3	COV-3U	COV-3UC60	COV-3UC60-D	COV-4	COV-4U	COV-4D	COV-4UC60	COV-4UC60-D	COV-5	COV-5U	COV-5UD							
X DIM	4.50"	8.00"	12.00"	4.50"	5.25"	5.25"	9.00"	9.00"	13.00"	6.75"	6.75"	7.25"	5.75"	7.25"	7.25"	9.50"	10.50"	14.50"	11.00"	7.25"	8.25"	11.00"	12.00"	16.00"	12.00"	10.25"	12.75"	16.50"

Installation Instructions:

- 1- Determine the surface cutout for the Cove (A) model being installed and prepare the surface. Note: refer to chart to determine X dimension.
- 2- Insert the Cove through the cutout.
- 3- For clamping Cove* - Place brackets (B) and thumbnuts (C) on stud. Tighten nuts until secure, do not over tighten.
For screw face Cove (not shown) – Using countersunk holes install screws (not provided) into work surface as desired. Tighten screws until secure, do not over tighten.
- 4- Connect power and data as needed.
- 5- Connections for hardwire units:
Black wire – circuit hot
White wire – circuit neutral
Green wire – circuit ground

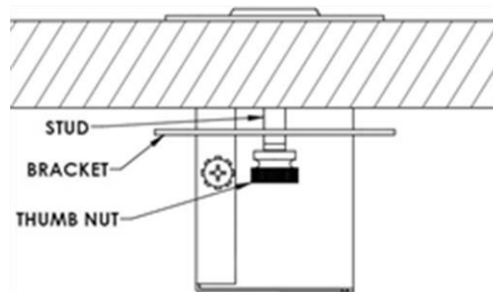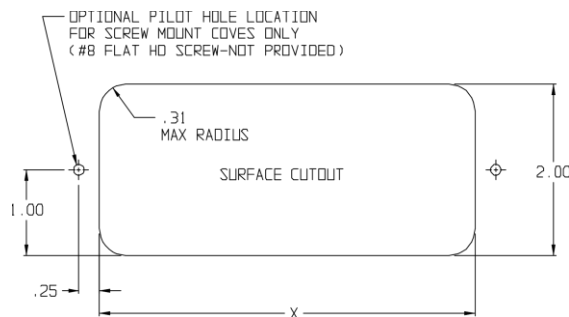

Standard Clamp

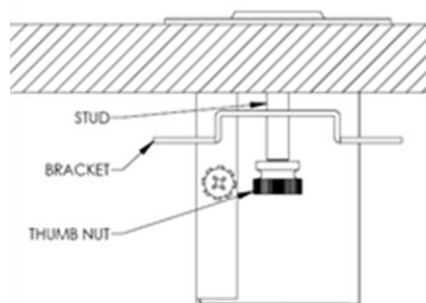

1.5" Clamp (sold separately)