

 
COVE INSTALLATION

(Standard, Screw Mount, Round, RJ, 60 Watt)



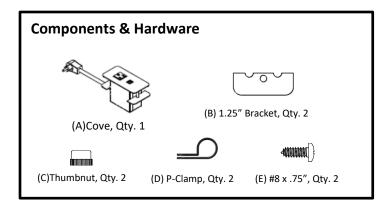

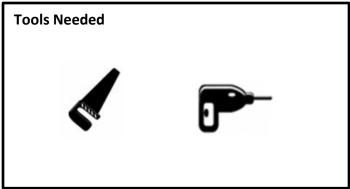



Note: Use Standard Model dimensions for Cove Round and Screw Mount versions (e.g. COV-R-2U = COV-2U).

Installation Instructions:

1- Determine the surface cutout for the Cove (A) model being installed and prepare the surface.


Note: Refer to chart to determine X dimension.

- **2-** Insert the Cove through the cutout.
- 3- For clamping Cove* Place brackets (B) and thumbnuts (C) on stud. Tighten nuts until secure, do not over tighten.
 For screw mount Cove (not shown) –
 Using countersunk holes install screws (not provided) into work surface. Tighten screws until secure, do not over tighten.
- **4-** Connect power and data as needed.
- **5-** Connections for hardwire units:

 Black wire circuit hot

 White wire circuit neutral

 Green wire circuit ground

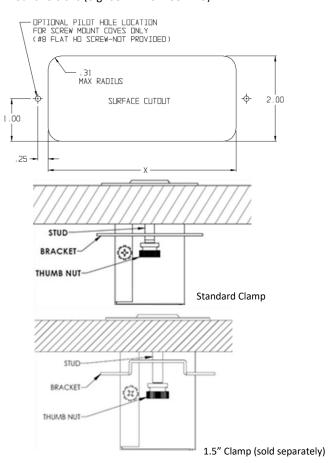

^{*}Surface thickness: Fits surface .25" to 1.25" with provided bracket. For surfaces up to 1.50" an alternate bracket is required (sold separately).

Note: A licensed electrician should make the hardwire connections. For use on dry work surfaces or furniture only. No serviceable parts, do not disassemble.