 
 


COVE TR INSTALLATION

Components & Hardware



(A) Cove TR, Qty.



(B) 1.25" Bracket, Qty. 2



(C) Thumbnut, Qty. 2



(D) P-Clamp, Qty. 2



(E) #8 x .75", Qty. 2

Tools Needed





* Surface thickness: Fits surface .25" to 1.25" with provided clamp. For surfaces up to 1.50" an alternate clamp is required (sold separately)


MODEL	COV-1U-TR	COV-2-TR	COV-21-TR	COV-3U-TR
"X" DIM	4.50"	4.50"	5.25"	7.25"

Installation Instructions:

- 1- Determine the surface cutout for the Cove (A) model being installed and prepare the surface. Note: refer to chart to determine X dimension.
- 2- Insert the Cove through the cutout.
- 3- For clamping Cove* - Place the brackets (B) and thumbnut (C) on stud. Tighten nuts until secure, do not over tighten.
- 4- Connect power and data as needed

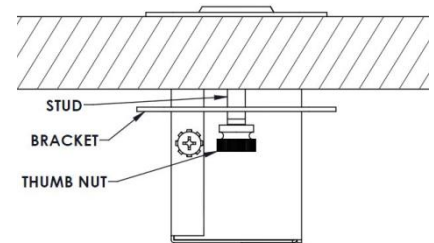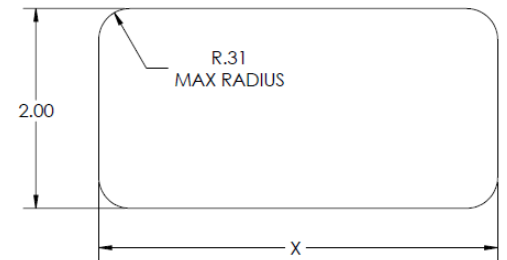

Standard Clamp

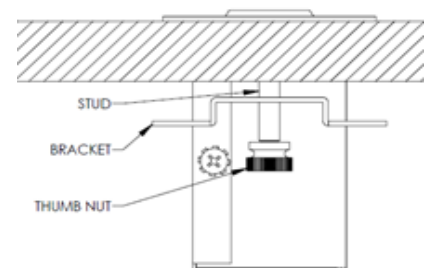

1.50" CLAMP (SOLD SEPARATELY)

Plug into an appropriate outlet that is properly installed and grounded in accordance with all local codes and regulations.