


COVE TR WITH DAISYLINK INSTALLATION

Components & Hardware

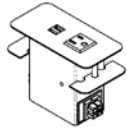

(A) Cove TR, Qty. 1



(B) 1.25" Bracket, Qty. 2



(C) Thumbnut, Qty. 2



(D) P-Clamp, Qty. 2



(E) #8 x .75", Qty. 2

Tools Needed



* Surface thickness: Fits surface .25" to 1.25" with provided clamp. For surfaces up to 1.50" an alternate clamp is required (sold separately)

Note: Use only Electri-Cable Assemblies System 42 Cables. ECA System 42 connectors have been evaluated to prevent inadvertent contact with live parts. Unused connector openings are not required to be capped; however a cap is available from the factory if desired.

MODEL	COV1U TR	COV-2 TR	COV-TR-21	COV-3U TR
"X" DIM	4.50"	4.50"	5.25"	7.25"

Installation Instructions:

- 1- Determine the surface cutout for the Cove (A) model being installed and prepare the surface.
Note: refer to chart to determine X dimension.
- 2- Insert the Cove through the cutout.
- 3- For clamping Cove* - Place the brackets (B) and thumbnut (C) on stud. Tighten nuts until secure, do not over tighten.
- 4- Connect System 42 power cables to connectors of Cove ensure latches are secure and fully seated.
Mount data cables as required.
- 5- Use P-Clamps (D) and remaining screws (E) to route cable and attach to underside of work surface as needed.

