 


COVE TR WITH DAISYLINK INSTALLATION

Components & Hardware



(A) Cove TR, Qty.



(B) P-Clamp, Qty. 2



(C) #8 x .75", Qty. 2

Tools Needed



System 42 connectors have been evaluated to prevent inadvertent contact with live parts. Unused connector openings are not required to be capped; a cap is available from the factory if desired.

Installation Instructions:

- 1- Use recommended cutout and prepare the surface.
- 2- Insert the Cove through the cutout.
- 3- For clamping Cove - Bend the tabs of the cove until folded under the table as shown. Optional, use the screw holes provided to further secure the Cove TR.
- 4- Connect System 42 power cables to connectors of Cove ensure latches are secure and fully seated.
- 5- Use P-Clamps (B) and remaining screws (C) to route cable and attach to underside of work surface as needed.

