


# COVE TR WITH DAISYLINK INSTALLATION

## Components & Hardware

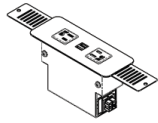

(A) Cove TR, Qty.



(B) P-Clamp, Qty.



(C) #8 x .75", Qty. 2



(D) Safety cover, Qty. 1

## Tools Needed



System 42 connectors have been evaluated to prevent inadvertent contact with live parts. Connector openings are not required to be covered; however a cover is provided for use if desired, see detail below.

*Plug into an appropriate outlet that is properly installed and grounded in accordance with all local codes and regulations.*

## Installation Instructions:

- 1-** Use recommended cutout and prepare the surface.
- 2-** Insert the Cove through the cutout.
- 3-** For clamping Cove - Bend the tabs of the cove until folded under the table as shown. Optional, use the screw holes provided to further secure the Cove TR.
- 4-** Connect System 42 power cables to connectors of Cove ensure latches are secure and fully seated.
- 5-** Use P-Clamps (B) and remaining screws (C) to route cable and attach to underside of work surface as needed.
- 6-** Slide safety cover (D) onto open male cable mount if desired.

