


## Simplex Removal

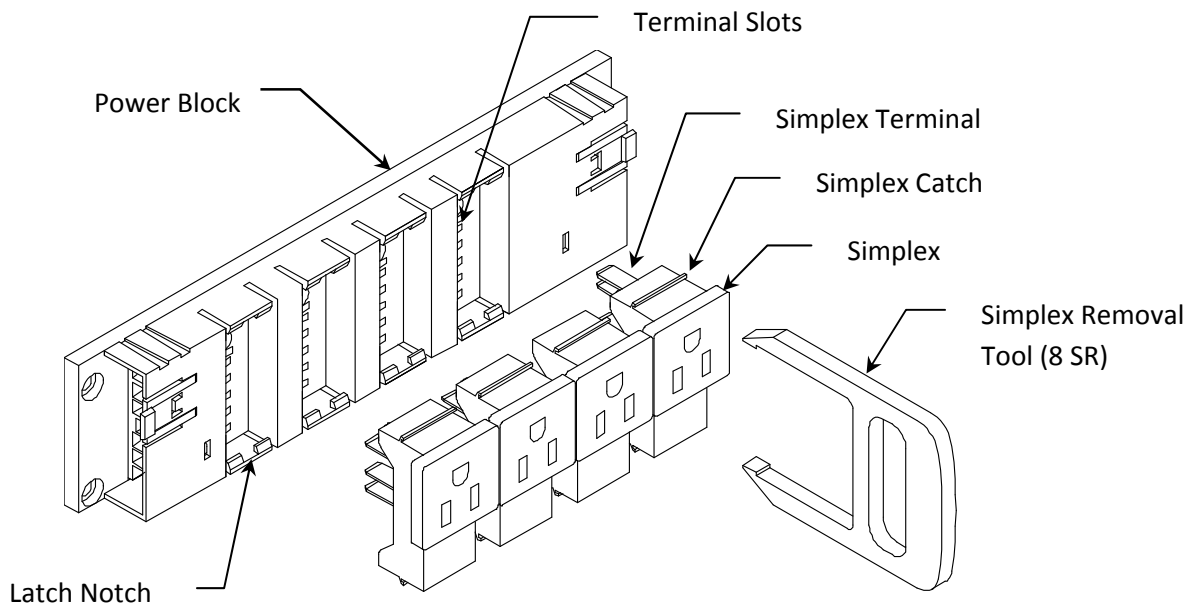

### To Remove or Replace Simplexes

1. Disconnect power before removing or changing simplex.
2. Insert Removal Tool over Simplex and into notches on latches.
3. Press Removal Tool toward Power Block until Removal Tool latches into place behind simplex catch.
4. Pull Removal Tool directly back and away from Power Block taking Simplex with it and removing it from block. Be sure latches are disengaged from Simplex by Removal Tool.
5. If replacing simplex slide new simplex into position using caution to be sure simplex terminals engage correct terminal slots
6. Press simplex into block firmly until both top and bottom latch are fully engaged.