




7310 Innovation Blvd. Suite 104
Fort Wayne, IN 46818
Customer Service: 800.357.5622

INTERFACE I & INTERACT UT TRIM PIVOT KIT

This device complies with part 15A of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Installation Instruction

Tools Required



1 Cutout hole in the desired location of the table top.

Cutout Sizes	Width	Length
Interface I UT	6.37	13.75
Interact UT	4.50	8.75

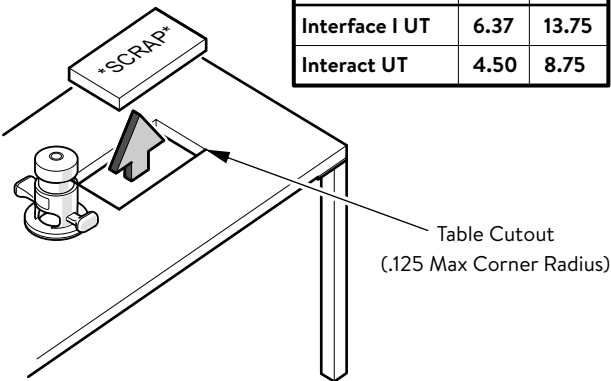

2 Position provided Template on top of cutout opening and predrill holes into both sides of cutout.

2B Predrill Hole 2
Dia .20 (13/64) X .75in Deep
(Remove template and enlarge Hole 2 both ends of cutout)

2A Predrill Hole 1
Dia .10 (7/64) X .75in Deep
(3 holes each end of cutout)

* NOTE *

Use care to ensure template sits flat on top of table and drill bit doesn't pierce table surface. (Drill all holes .75in deep)


3 Mount Pivot Assemblies to each end of cutout.

* NOTE *

Engage both Pivot Pins into predrilled holes #2 on each end of cutout, and then secure using #6 X .75in flat head screws.

* NOTE *

Use care when tightening screws to ensure table surface isn't damaged during installation.

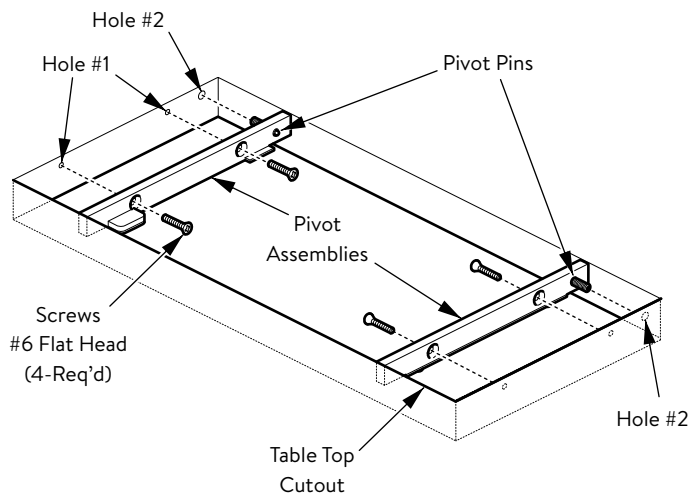


4A Install Lid onto Lid Support with Double Sided Tape.

* NOTE *

Lid must be .25in thick at point of mounting, rabbet wood lids as needed.

Lid Sizes	Width	Length
Interface I UT	5.75	12.81
Interact UT	3.87	7.81

Lid Max Recommended Thickness .75in

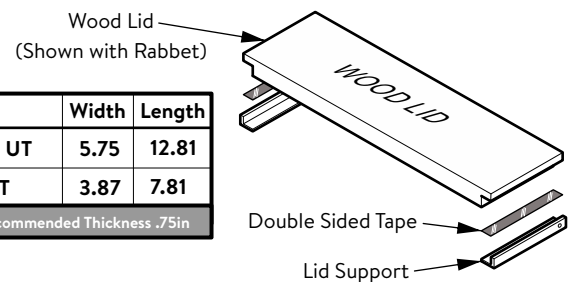

4B Install Lid Assembly between Pivot Assemblies.

* NOTE *

Place Plastic washer over Pivot Pins prior to installing Lid Assembly. Use a small screwdriver to depress opposing Pivot Pin to engage lid assembly.

