

## INTERFACE G2 UT INSTALLATION

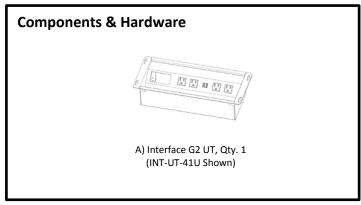

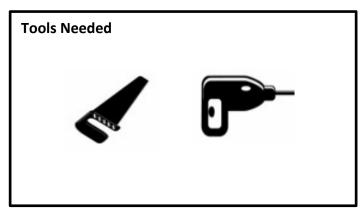





**Note:** Circuit breaker reset button located inside data compartment. A licensed electrician should make the hardwire connections.

\*Take care not to pierce finished surfaces.

**1-** Locate and cut the hole for the Interface G2. Prepare pilot holes as needed.\*

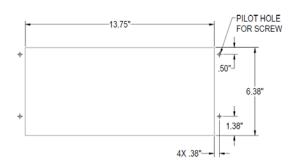

**2-** Mount Interface G2 UT (A) beneath the cutout. Secure with screws\* (not provided) and position as needed. Fabricate top as required.

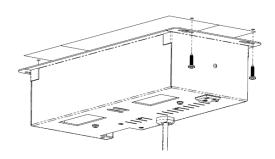

**3-** Connect all power and data cabling as needed.

**4-** Connections for hardwire units:

Black wire – circuit hot White wire – circuit neutral Green wire – circuit ground