

# MARINA GROMMET INSTALLATION

## Components & Hardware



Marina Grommet


## Tools Needed




Notes: \*Use caution that any Pilot holes do not pierce finished surface.  
\*\* Do not remove or loosen top Grommet screws

## Installation Instructions:

- 1-** Provide 12.125" x 7.50" cutout at location Grommet will be mounted. Corners can have a maximum of a .125" radius.

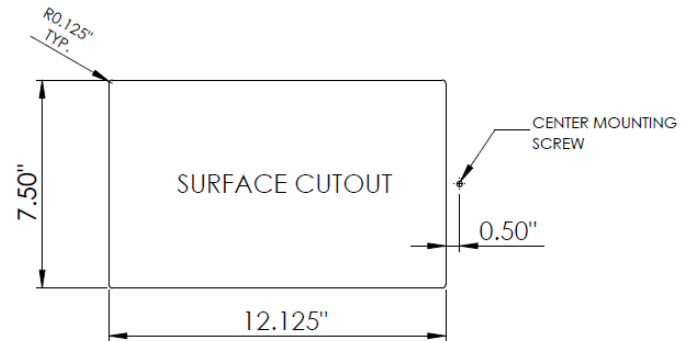

- 2-** Mark or pilot drill the location for center mounting screws as shown. \*

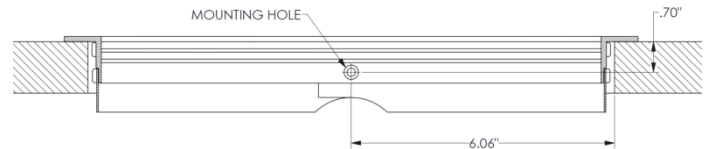

- 3-** Adjust Grommet for table thicknesses less than 1.18" (30mm) by removing Grommet Skirt. For table thicknesses greater than 1.18" (30mm) proceed to steps below.
  - a. Remove 4 bottom Grommet screws in each corner of Grommet. Retain screws for reinsertion into Grommet later. \*\*
  - b. Remove and discard skirt.
  - c. Reinstall the 4 screws removed above.
- 4-** Insert Grommet into surface cutout and secure to table with 2 - #8 Flat head screws (not provided) Through mounting holes in side of Grommet. Ensure Grommet is centered in cutout and flat to work surface.
- 5-** Check for smooth operation of both doors.