

INTERACT G2 UT INSTALLATION

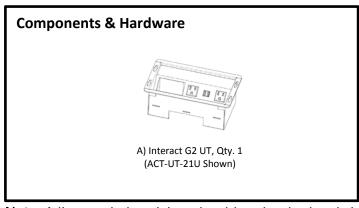


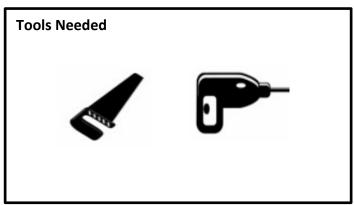




Note: A licensed electrician should make the hardwire connections. *Take care not to pierce finished surfaces.

1- Locate and cut the hole for the Interact G2. Prepare pilot holes as needed.*

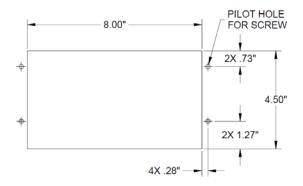

2- Mount Interact G2 UT (A) beneath the cutout. Secure with screws* (not provided) and position as needed. Fabricate top as required.

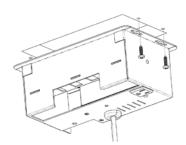

3- Connect all power and data cabling as needed.

4- Connections for hardwire units:

Black wire - circuit hot

White wire - circuit neutral

Green wire - circuit ground