REEF INSTALLATION

ECA BY DEKKO

Components & Hardware

(A) REEF, Qty. 1

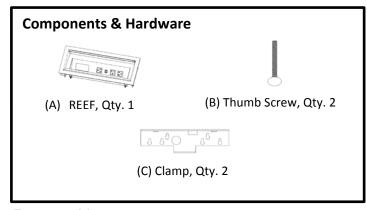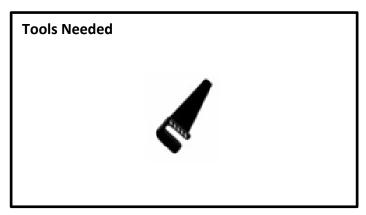(B) Thumb Screw, Qty. 2

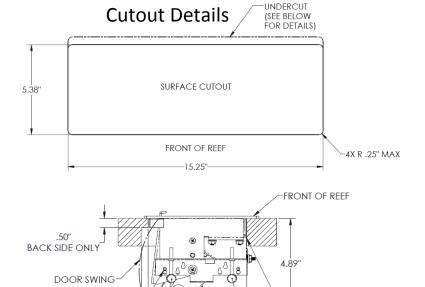(C) Clamp, Qty. 2

Tools Needed

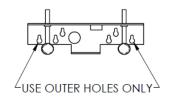**For use with:** This product fits tables 1.00" - 2.00" thick.

Note: A licensed electrician should make the hardwire connections. For use on dry work surfaces only. No serviceable parts, do not disassemble.

Installation Instructions:

1- Determine the Reef's (A) mounting location and prepare the surface.

2- Insert the Reef (A) into the cutout from above and check for smooth operation of the door and adjust position in cutout if required.

3- Clamp into position using clamps (C) and thumb screws (B) provided. Note: Key slots in clamps engage over T-studs in Reef (A) and thumb screws (B) tighten against the underside of the table. Use appropriate key slots to clamp (C) into position (see detail A).

4- Connect all power and data cabling as needed.

5-   Connections for hardwire units:

Black wire – circuit hot
White wire – circuit neutral
Green wire – circuit ground

Cutout Details

UNDERCUT
(SEE BELOW FOR DETAILS)

5.38"

SURFACE CUTOUT

FRONT OF REEF

15.25"

4X R .25" MAX

FRONT OF REEF

.50"
BACK SIDE ONLY

4.89"

DOOR SWING

KEYSLOTS ENGAGED OVER T-STUDS

THUMB SCREWS

KEEP REEF FLUSH AGAINST THIS SIDE OF TABLE

5.38"
HOLE CUTOUT WIDTH

5.75"
HOLE WITH UNDERCUT

USE OUTER HOLES ONLY

Detail A