

**FEATURES:**

**Applications**

- Desks
- Conference tables
- Training tables
- Benching systems
- Seating
- Lockers


**Compatible Products - See Individual Product Literature For More Details**

- Cove Series
- Cove TR Series
- Oasis Series
- Oasis Mini Series
- Power Slip
- Reef
- Retro Series - Cove RJ & LG; Villa LG
- Sto-Way
- Villa I Series
- Villa II Series
- Villa AV Series
- Villa UM Series


**Specifications**

- 2 Utility Circuits Share Neutral and Ground
- All Circuits Rated for 20 Amps
- Optional Nylon-Braided Cable Covers Available
- Quick Disconnect uses Female/Female Cables to Connect to Compatible Unit
- Link Up to 40 Receptacles Across 2 Circuits
- Additional Infeed Options Available
- Quick Kits Available for Compatible Products *(Available On Select Models)*
- UL / ETL Listed for US and Canada

**System Components**

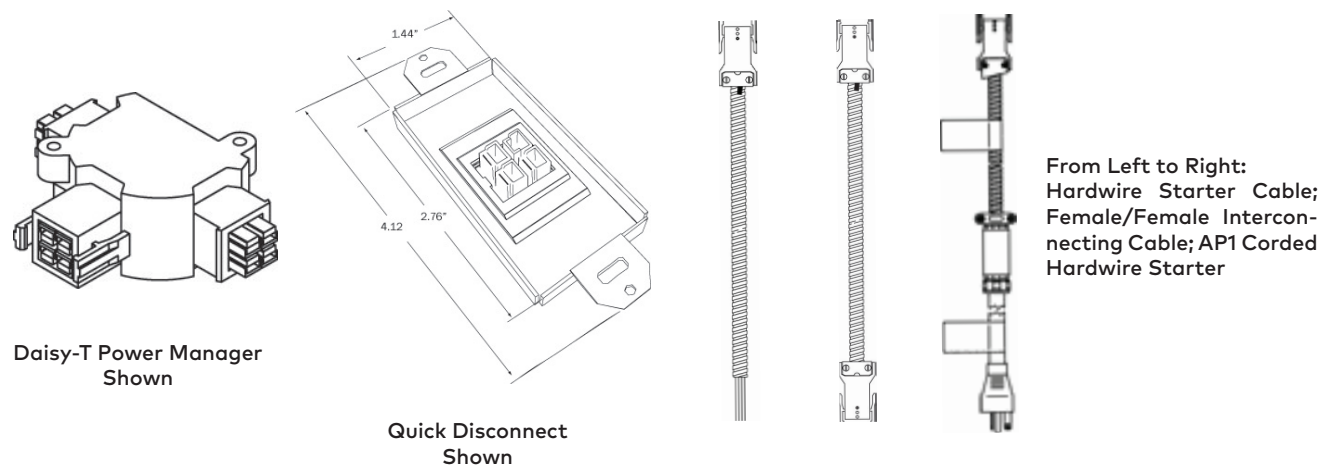

**DAISYLINK™ SYSTEM**

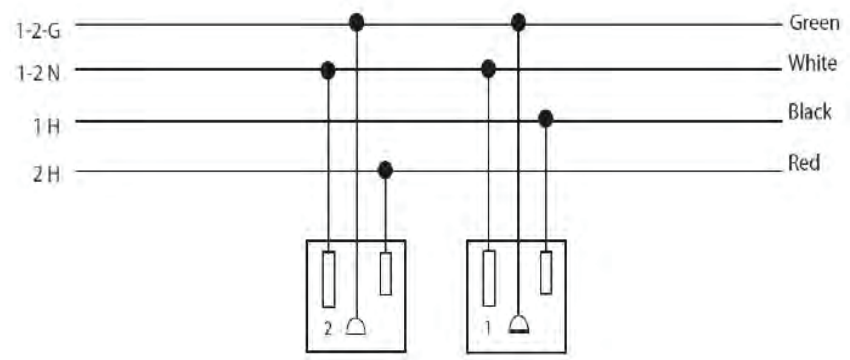

**Wiring Schematic**  
4 Wire 2 Circuit: 2 Hots, 1 Neutral, 1 Ground  
2 Utility Circuits Share a Neutral and Ground

- Starter Cable Specifications - (Purchased Separately)**
- 2 Circuit Hardwire Starter Cable
  - Starter & Interconnecting Cable Lengths: Minimum 12" - 180" *(Specify in 1" Increments)*
  - Single-Circuit 20 Amp Power Infeed with 72" Molded Plug
  - Available Hardwire Lengths up to 220"
  - Hardwire Whip End Should Be Connected to Building Circuitry by Professional Electrician

**DESCRIPTION FINISH/LENGTH PART NUMBER**

**DaisyLink™ - Interconnecting Cables Options**

• Female/Female Interconnecting Cables	12" - 180" Cable	42-FF- LENGTH*
• Female/Male Interconnecting Cables	12" - 180" Cable	42-FM- LENGTH*

Specify in increments of 1" Cable Lengths in Part Number. Cable Lengths Minimum of 12" - 180" Maximum.

**DaisyLink - Power Infeed/Starter Cable Options**

• Multi-Circuit Hardwire Starter Cable/Infeed	12" - 180" Cable	42SB2- LENGTH*
• Quick Disconnect - Insert for Floor Box and Wall Outlet Applications. Fits standard Decora® Opening.	N/A	42 QD INSERT
• Single Circuit 20 Amp Power Infeed with 72" Molded Plug	N/A	42 20AP1-72

Specify in increments of 1" Cable Lengths in Part Number. Cable Lengths Minimum of 12" - 180" Maximum. AP1 Infeed Cannot exceed 72"

**Daisy-T Power Manager**

• Daisy T Power Manager - T-Connector used to branch into different directions	N/A	DAISY-T
--	-----	---------

**Cable Covers**

• Cable Covers added to any 4 wire 2 circuit Quick Kit	Black	Add a "B" to the end of an existing DaisyLink Quick Kit (i.e VIF-4-1-P-B-36KB)
• All 72" Power Cords	Black	Add a "B" to the end of cabling length. (i.e 42 AP1-72B or 42 SB2-72B)
• Cable Covers added to individual interconnecting or starter cables	Black	Add a "B" to the end of cabling length (i.e 42 FF-27B)