



2505 Dekko Drive
Garrett, IN 46738
Customer Service: 800.357.5622


ASHLEY TRIO⁺ - Corded -

Above Worksurface Mounting

Installation Instruction

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Tools Required

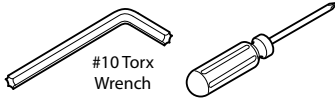

SPECIAL NOTE *

Optional data port options will need to be purchased from L-COM. L-COM part numbers have been provided in step #2.


1 Remove Data Port Blank

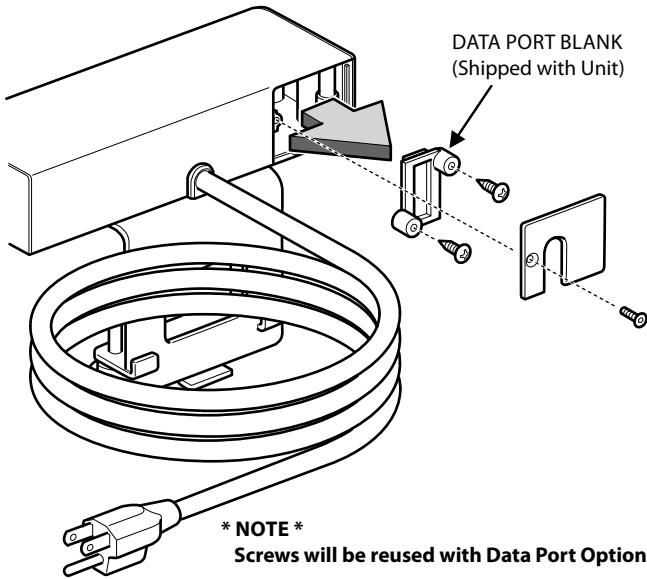


2 Install Data Port Option - (RJ45, HDMI, VGA)

* NOTE *

Reuse screws from previous step and secure Adapter to Data Port prior to assembling into unit

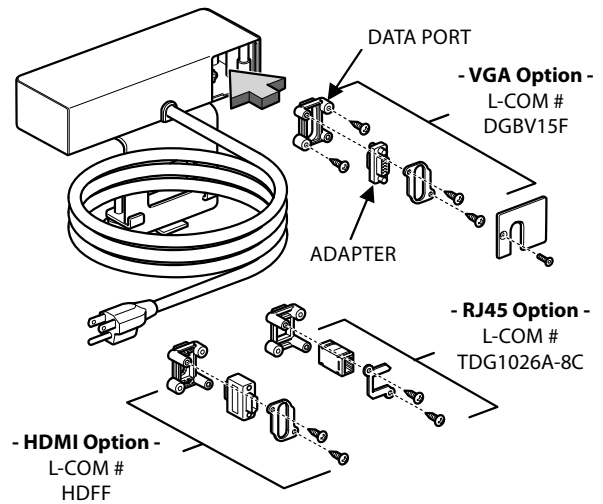


3 Slide Bracket Behind Worksurface

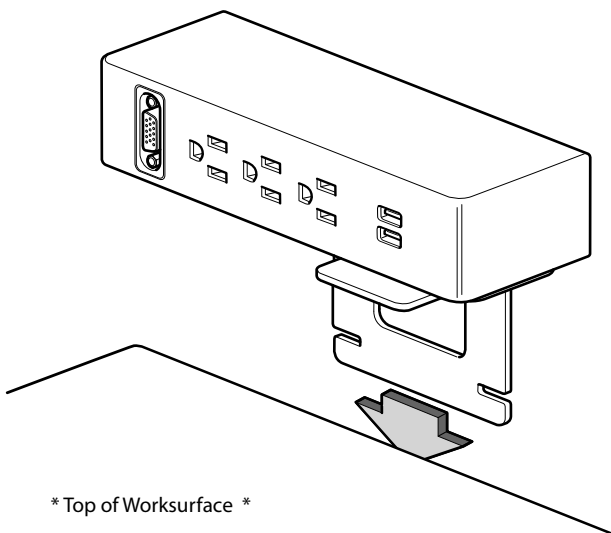

4 Install Bottom Bracket Under the Worksurface

* Underside of Worksurface *

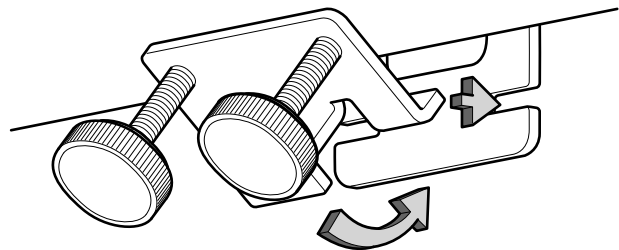



2505 Dekko Drive
Garrett, IN 46738
Customer Service: 800.357.5622


ASHLEY TRIO⁺ - Corded -

Above Worksurface Mounting


Installation Instruction

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tools Required



#10 Torx
Wrench



Screwdriver needed for optional
power cord mounting clamps.


5 Secure Thumb Screws and Route Power Cord Option to Nearest Power Distribution Source

(A)



#8 x 1/2" Pan Head Screw

* Underside of Worksurface *

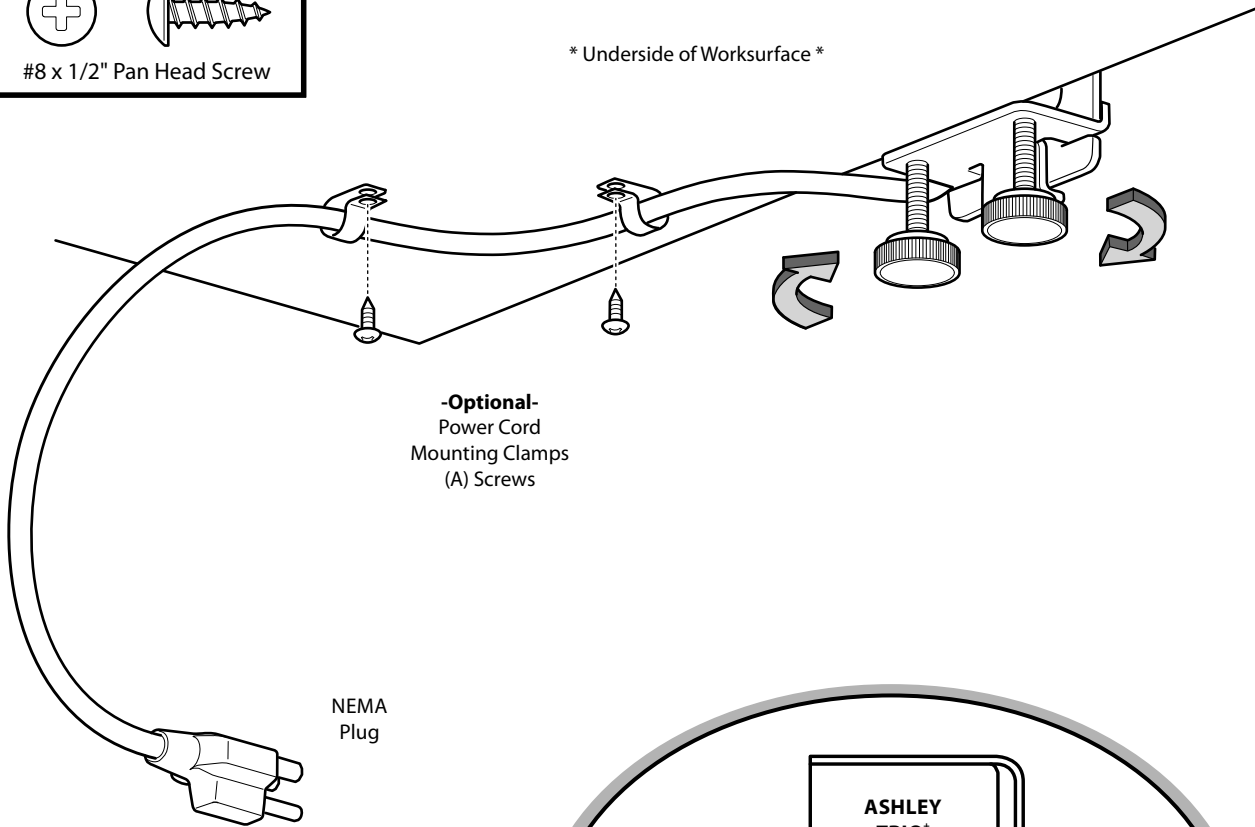

Elevation Detail

Worksurface
Thickness Range
(1/2" to 1-1/2")

* Side of Worksurface *

