

STUDIO


BY DEKKO 2505 Dekko Drive  
Garrett, IN 46738  
Customer Service: 800.357.5622

# ASHLEY DUO

- Corded -  
Above Worksurface Mounting  
Installation Instruction

This device complies with part 15A of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


### Tools Required



Screwdriver needed for optional power cord mounting clamps.




## 1 Slide Bracket Behind Worksurface

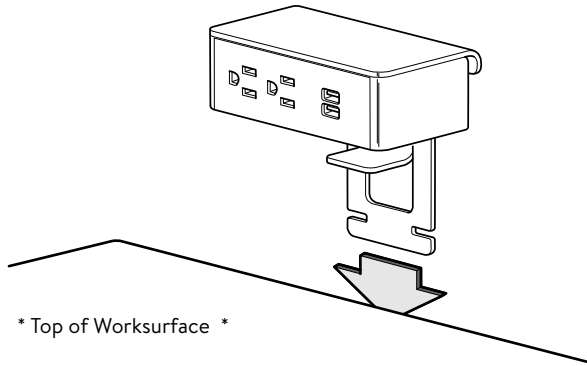


\* Top of Worksurface \*

## 2 Install Bottom Bracket Under the Worksurface

\* Underside of Worksurface \*

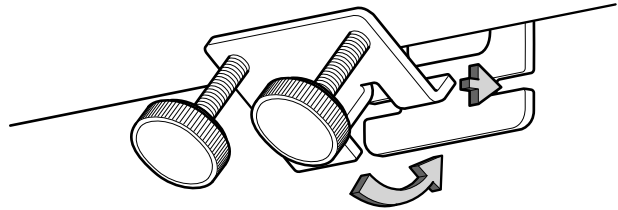


## 3 Secure Thumb Screws and Route Power Cord Option to Nearest Power Distribution Source

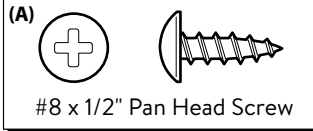

#8 x 1/2" Pan Head Screw

\* Underside of Worksurface \*

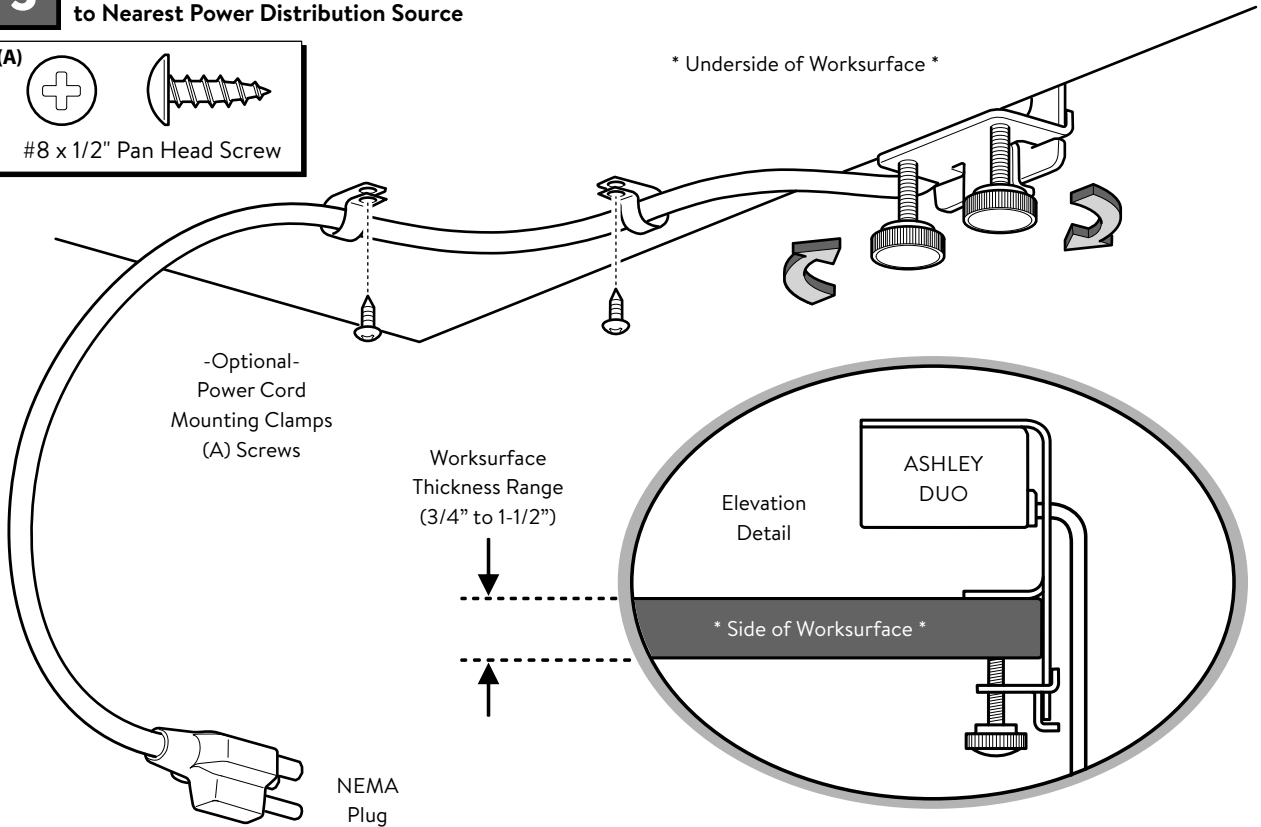

-Optional-  
Power Cord  
Mounting Clamps  
(A) Screws

Worksurface  
Thickness Range  
(3/4" to 1-1/2")

Elevation  
Detail

ASHLEY  
DUO

\* Side of Worksurface \*

NEMA  
Plug