



BY DEKKO


2505 Dekko Drive
Garrett, IN 46738

Customer Service: 800.357.5622

Powered by Pent® ASHLEY 202 - Corded - Above Worksurface Mounting Installation Instruction

This device complies with part 15A of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


Tools Required



SPECIAL NOTE *


Optional data port options will need to be purchased from L-COM. L-COM part numbers have been provided in step #2.

1 Remove Data Port Cover

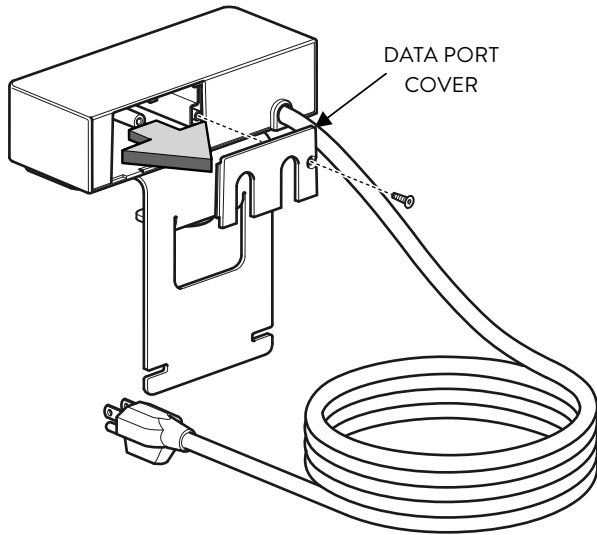


2 Install Data Port Options (VGA, RJ45, HDMI, BLANK)

NOTE
See Sheet #2 for Detailed Instructions

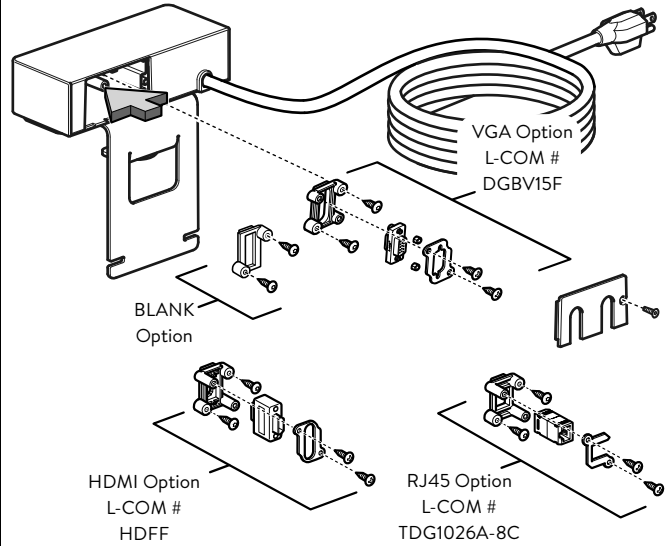


3 Slide Bracket Behind Worksurface

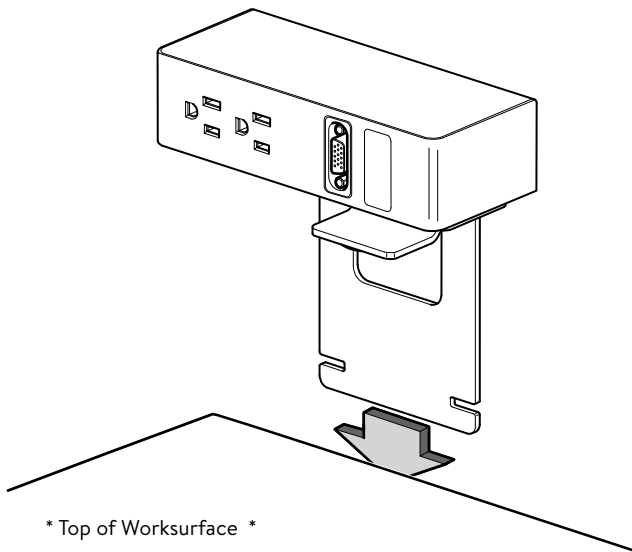

* Top of Worksurface *

4 Install Bottom Bracket Under the Worksurface

* Underside of Worksurface *

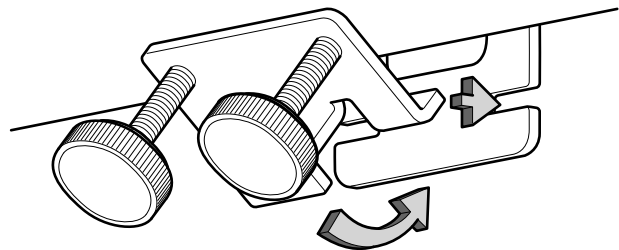



2505 Dekko Drive
Garrett, IN 46738
Customer Service: 800.357.5622

Powered by Pent®

ASHLEY 202


- Corded -

Above Worksurface Mounting

Installation Instruction


This device complies with part 15A of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tools Required




2.1 Install VGA Option (L-COM# DGBV15F)


A Remove Nuts from VGA Connector

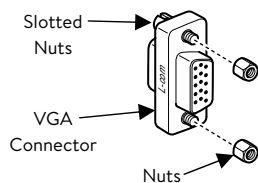

B Install Bracket to Connector

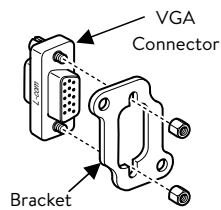


C Install Components into Body of Unit

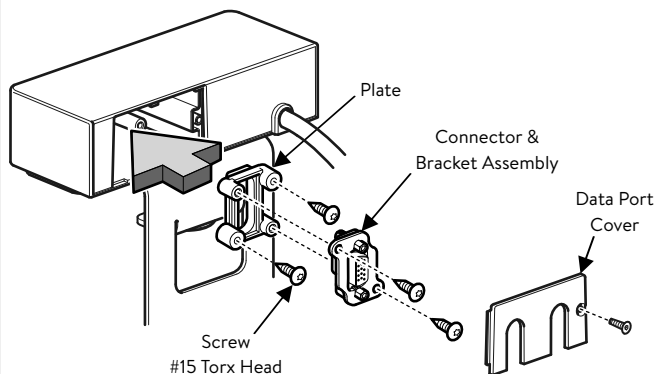


2.2 Install RJ45 Option (L-COM# TDG1026A-8C)


A Mate Angled Surfaces of Plate and Connector

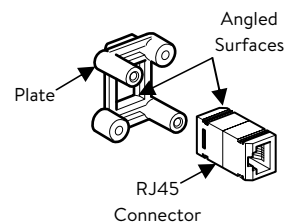


B Install Bracket

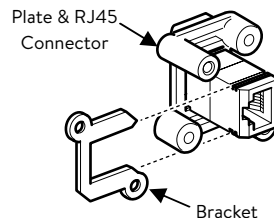


C Install Components into Body of Unit

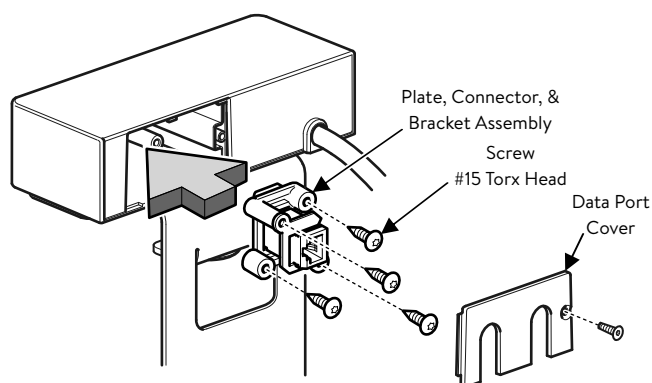

2.3 Install HDMI Option (L-COM# HДФF)

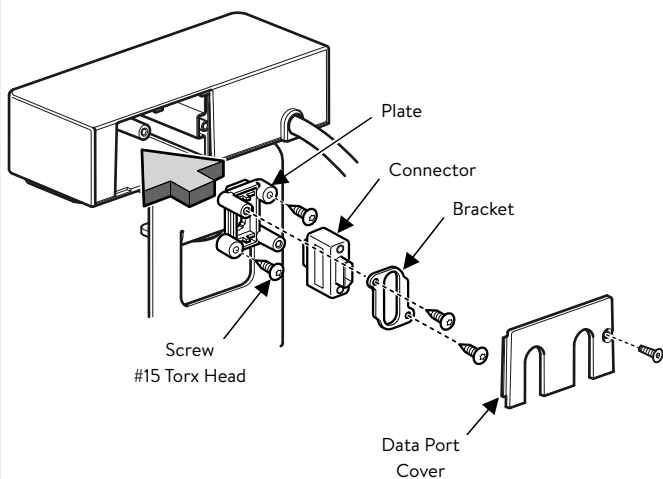

2.4 Install BLANK Option

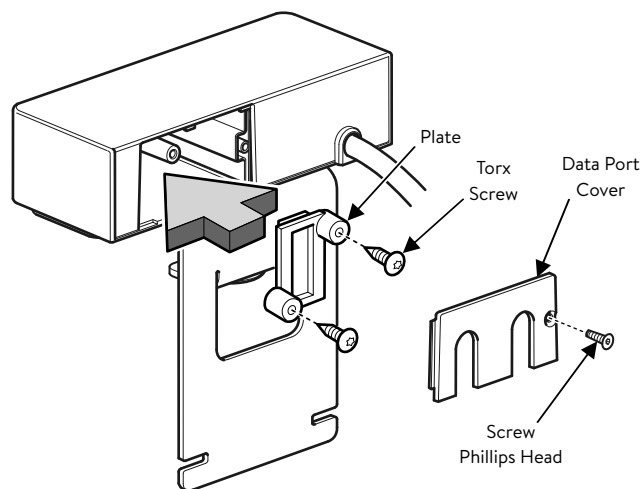




2505 Dekko Drive
Garrett, IN 46738
Customer Service: 800.357.5622


Powered by Pent®
ASHLEY 202
- Corded -
Above Worksurface Mounting
Installation Instruction

This device complies with part 15A of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Tools Required



#15 Torx
Wrench



Screwdriver needed for optional
power cord mounting clamps.

5 **Secure Thumb Screws and Route Power Cord Option to Nearest Power Distribution Source**

(A)



#8 x 1/2" Pan Head Screw

* Underside of Worksurface *

