
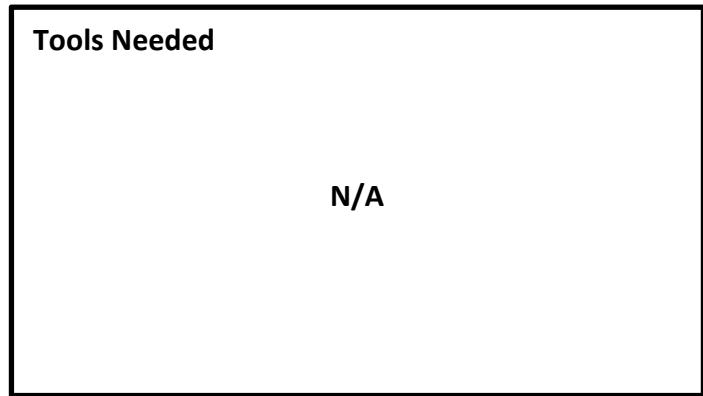


GLASS-TOP PADS INSTALLATION

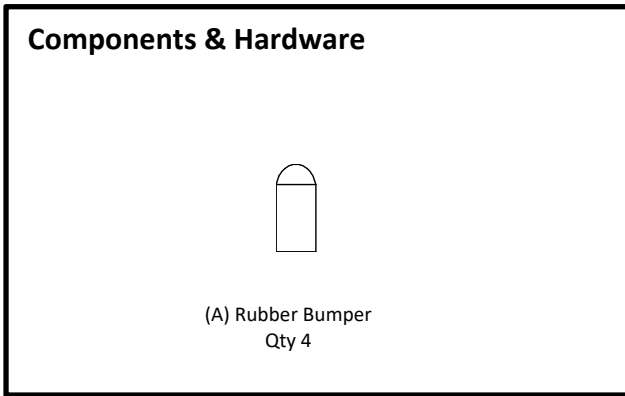

For use with: Glass thicknesses minimum:
Interact G2 & Interface G2 - .25"
Oasis, Oasis Mini & Reef - .38"

- 1-** Install power device (not shown) as per their individual installation instructions.
- 2-** Assemble Clamp by inserting Thumb Screws into threads as shown below.
- 3-** Slide Rubber Bumpers (A) onto exposed ends of threaded Thumb Screws before attaching assembled clamps to power device.
- 4-** Tighten Thumb Screws until power device is held firmly in place.

Optional – An anti-skid membrane (not supplied) may be used with the power device to reduce any likelihood of marring the glass during use. This membrane should be applied, at the installer's discretion, to underside of power device's bezel before installing into table.

